


Sequence of Operations for building a TAZ 6.0

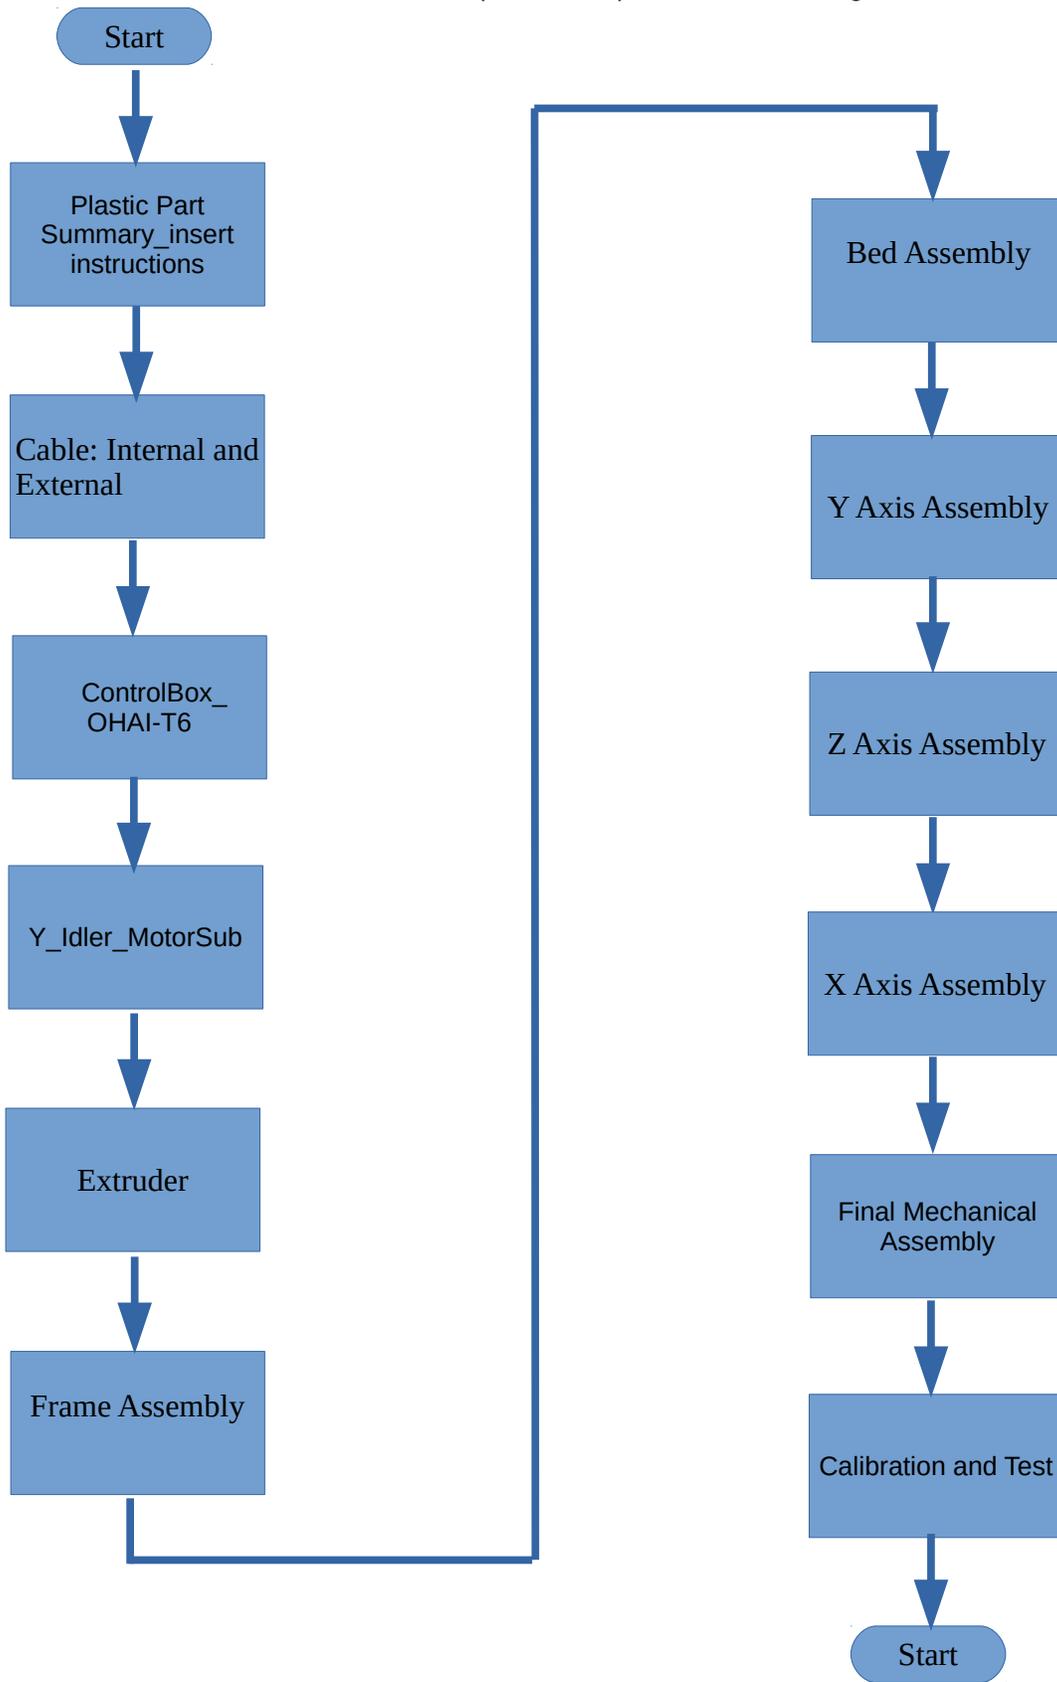

- 1) references to “hand tight” refer to the torque that can be applied to a screw with a screw driver, and hand tight roughly equates to 8 in-lbs or .9 N-m
- 2) references to “finger tight” refer to the torque that can be applied to a screw with a screw driver, and hand tight roughly equates to 5 in-lbs or .56 N-m